

Canon G6 Quick Settings

- ❖ Make sure battery is in the camera to retain settings.
- ❖ **Macro-Mode:** Push the button left of the eye piece with the flower next to it until you see the flower in your monitor.
- ❖ **No Flash Mode:** Push the button on the top front of the camera with the lightening bolt until you see the symbol with the lightening bolt with a circle and a hash through it.
- ❖ **Date:** Date is set by your computer, when you hook it up, or you can set it manually by pressing menu, arrow right go down time and date and arrow up and down on the appropriate date and time to change and arrow right to change.
- ❖ **Aperture Priority Setting:** Turn the large dial in the back of the camera to the "AV" to set in this mode
- ❖ **Photo Quality:** push function lower right of the monitor and push down to the last "S" on the left of the monitor and push right until you have the "S" highlighted next to the "RAW"
- ❖ **F-STOP:** Then turn command dial until the F-STOP number is F7.0. The command dial is located between the shutter button and the top display at an angle.
- ❖ **White Balance:** Attach your camera to the dome. Turn the lights full on and remove all objects from the dome except the flat white arch stage. Make sure all is white and bright. Press the down arrow in the multi selector once, arrow to the right until you have selected custom 1 or 2. To see this white point you will need to hit the set button lower left of the multi selector. After you do this push the down arrow again to turn off this menu. To save your settings press MENU button push to the right until you are on the Record Tab. Arrow to the bottom of the Record Tab. Push to the right on the Save Settings option. When you get into this menu, hit the Set button to save the settings. When you are finished with this then hit menu to return to the shooting screen. There will then be a small icon on the middle left side of your monitor (this icon looks like a flower it is two triangles supporting a rectangle). Be aware that white balance should be checked and reset from time to time to achieve consistent photos.
- ❖ **Metering:** to set the metering mode press the button on top of the camera closest to the monitor. The icon next to it will look like a box with pretenses sideways. Press this until you see this icon on your screen.
- ❖ **ISO:** press function and push in the appropriate direction until you are on the "50"
- ❖