



Canon G7 Quick Settings

- ❖ **Aperture-Priority Mode** – Turn the Shooting Mode dial to **Av**—found on top of the camera, next to the shutter button. Then turn the wheel on the back of the camera clockwise to select an aperture of **F8.0**.
- ❖ **ISO: 80** – Turn the ISO dial to 80—found on top of the camera on the left
- ❖ **No-Flash Mode** – Press the right side of the multi-selector, marked with a lightning bolt until OFF is selected, displaying a lightning bolt with a hash mark.
- ❖ **Single-Shot Mode** – Press the bottom of the multi-selector to select SINGLE SHOT, a single square icon.
- ❖ **Macro Mode** – **OFF** when shooting with the supplemental magnifying lens, leave the camera in Normal, *not* Macro Mode. This allows you to use the full extent of the zoom range, although you may have to back the camera away from the item slightly in order to focus.

* The following options are accessed by pressing the **Function/Set Button** in the center of the multi-selector and clicking up or down on the multi-selector. *

- ❖ **White-Balance: Custom** – To set a custom white balance specific to the lights in the Imagedome, mount the camera on the ImageDome, turn all the lights on full and remove everything from inside the Dome except the flat white stage. Zoom in until only white is visible on the camera's screen. Then turn or click the multi-selector to the right until the custom white balance symbol  is highlighted, and press the menu button to set.

*Reset this at the beginning of every picture-taking session.

- ❖ **Photo Effect: Off**
- ❖ **Bracketing: Off**
- ❖ **Metering Mode: Center-Weighted** – Turn the multi-selector to highlight the second option, which looks like an empty set of brackets. []
- ❖ **ND Filter: Off**
- ❖ **Image Quality: SuperFine** – Select the first option, 
- ❖ **Image Size:** for printing, select– **L**; for web display only, select a smaller file size.