



Canon Rebel XT Quick Settings

- ❖ **ISO: 100** – Press the up/ISO button, then press the up key to select 100, and press SET.
- ❖ **One-Shot Mode** – Press the right arrow/AF button and use the up or down arrows to select ONE-SHOT, then press SET.
- ❖ **No Flash**– always keep the built-in speedlight closed when shooting on the Imagedome.
- ❖ **Av/Aperture-Priority Mode** –Set the Mode Dial to “Av,” then turn the main command dial to the right to select a high aperture (F18 or higher).
- ❖ **White-Balance: Custom** – With the camera mounted on the ImageDome, turn all the lights on full and remove everything from inside the Dome except the flat white stage and lower or zoom the camera until only white is visible in the viewfinder. Set the lens focus mode to MF, and focus manually. Take a photo of the plain white stage. In the menu, under the “camera2” tab, scroll down to “Custom WB,” then press SET. Use the right and left arrows to select the white image that you took, then press SET. Your custom White Balance setting has now been recorded. Press the down arrow/WB button, and select this symbol  to shoot under the custom setting.
- ❖ **Metering Mode: Center-weighted Averaged** –In the menu, under the “camera 1” tab, use the arrows to highlight the empty set of brackets. []
- ❖ **Image Quality: Large Fine** – In the menu, on the “camera1” tab, select Quality and hit SET. Select the desired image size and quality. We recommend the first option, L for most users.