



Canon Rebel XTi Quick Settings

- ❖ **ISO: 100** – Press the up/ISO button to bring up the menu, use the arrow keys to select 100, then press the shutter button halfway to close the menu.
- ❖ **Av/Aperture-Priority Mode** –Set the Mode Dial to “Av,” then turn the main command dial to the right to select a high aperture (F18 or higher).
- ❖ **White-Balance: Custom** – With the camera mounted on the ImageDome, turn all the lights on full and remove everything from inside the Dome except the flat white stage and lower the camera until only white is visible in the viewfinder. Set the lens focus mode to MF, and focus manually. Take a photo of the plain white stage. In the menu, under the “camera2” tab, scroll down to “Custom WB,” then press SET. Use the right and left arrows to select the white image that you took, then press SET again. Your custom White Balance setting has now been recorded. Press the down arrow/WB button, and select this symbol  to shoot under the custom setting. Press the shutter to close the menu.
- ❖ **Metering Mode: Center-weighted Averaged** –Press the LEFT arrow/Metering Mode button, use the arrows to highlight the empty box. Press the shutter button halfway to close the menu.
- ❖ **Image Quality: Large Fine** – In the menu, under the “camera1” tab, select Quality and hit SET. Select the desired image size and quality. We recommend the first option, L for most users, especially if your image will need to be cropped at all after capture.
- ❖ **No Flash**– always keep the built-in speedlight closed when shooting on the Imagedome.
- ❖ **Drive Mode: One-Shot**– Camera should default to this.
If changed, press the drive mode button—to the right of the back screen, above the multi-selector, then use the arrows to select the single box, for ONE-SHOT. Press the shutter button to clear the menu.