



 
Canon S 80 Quick Settings

- ❖ **ISO: 50** – Press “up” on the multi-selector until **ISO** appears and floats to the top of the screen
50
- ❖ **Single-Shot Mode** – Press the button immediately to the left of the viewfinder until a single square icon appears and floats to the top of the screen.
- ❖ **No-Flash Mode** – Arrow right on the multi-selector until the no-flash icon (a lightning bolt with a hash mark through it) appears and floats to the top of the screen
- ❖ **F-Stop: F8.0** – Turn the multi-selector wheel to the right until display bottom center reads F8.0.
- ❖ **Macro Mode: ON** – Press the left arrow on the multi selector, marked with the tulip icon. 

* The following options are accessed by pressing the **Function/Set Button** in the center of the multi-selector and clicking up or down on the multi-selector. *

- ❖ **White-Balance: Custom** – To set a custom white balance specific to the lights in the Imagedome, mount the camera on the ImageDome, turn all the lights on full and remove everything from inside the Dome except the flat white stage. Zoom in until only white is visible on the camera’s screen. Then turn or click the multi-selector to the right until the custom white balance symbol  is highlighted, and press the menu button to set.

*Reset this at the beginning of every picture-taking session.

- ❖ **Photo Effect: Off**
- ❖ **Bracketing: Off**
- ❖ **Metering Mode: Center-Weighted** – Turn the multi-selector to highlight the second option, which looks like an empty set of brackets. []
- ❖ **Image Quality: SuperFine** – Select the first option, 
- ❖ **Image Size:** for printing, select– L; for web display only, select a smaller file size.