

Nikon CoolPix 4500

QUICK SETTING INSTRUCTIONS



Make sure battery is installed to retain settings.
Turn camera to ON position.



A

Aperture Priority Setting:

Hold MODE (top of camera behind shutter button) button down and turn command dial until the "A" appears in the lower left hand corner of your monitor



White Balance:

Attach your camera to the dome. Turn the lights full on and remove all objects from the dome except the flat white arch stage. Make sure all is white and bright. Press MENU once, arrow down to "White Balance," arrow right once, arrow down once to "White Balance Preset." Arrow right while White Balance Preset is highlighted. Arrow down to MEASURE, then depress multi-selector to set white balance preset




Metering:

Arrow down to METERING, arrow right, arrow down to CENTER-WEIGHTED, then depress the multi-selector to set the metering mode.

FINE

Image Quality:

 Push the Menu button to get to the second page and select Image Quality, push right and arrow up to Fine, then depress the multi-selector to set the Image Quality setting.



Focus Options:

Push the menu button to get to the third page of the shooting menu. Arrow down to the focus, and arrow right. Arrow right on "AF Area Mode." Arrow down to Manual and depress the multi-selector to set you focal options.

Date:

Push Menu once to get to the fourth page of the shooting menu. Arrow down until you reach "White Balance" again. Arrow up and the highlight will disappear. Arrow right. You should now be in the setup menu. Arrow down until you get to the second page. The first item on the second page is the date. Arrow right on the date to enter date settings. Use up and down arrows on multi selector to set date. Arrow to the right to and depress the multi-selector to exit.

To Save Settings:

Arrow up to "Controls." Arrow right on controls and arrow right on "func." Arrow down to "White Balance," and depress the multi-selector to retain settings. Push menu until you exit menu mode.

Macro-Mode:



Push macro button (lower left of monitor) until the flower icon appears in the upper right hand corner of the monitor.

No Flash Mode:



Push the ISO button (other half of the camera above the pop-up flash) until the No Flash icon appears beside the flower.

F8.5

F-STOP:

Push MODE button once and release. Then turn command dial until the F-STOP number is F7.0.



Multi - Selector



ISO Button